

# Function added in X50 version 1.0.1 (Favorites)

## Overview

The X50 system version 1.0.1 adds a "Favorites" function. This lets you register your favorite programs or combinations to each of the numeric buttons [0]–[9] so that these programs or combinations can be recalled with a single touch. This is particularly convenient for live performances.

## Using the Favorites function

### Registering a program or combination as one of the Favorites


As an example, here's how to register a frequently used program to the numeric button [1], and a frequently used combination to the numeric button [2].

1. Select the program that you want to register to the numeric button [1].

For details on selecting a program, refer to p.37 of the separate "Operation guide."

*Note:* Make sure that the "FAVORITES" indicators are not displayed.


If these indications are shown, press the [./HOLD] button to turn off the Favorites function. The indicators will turn off.

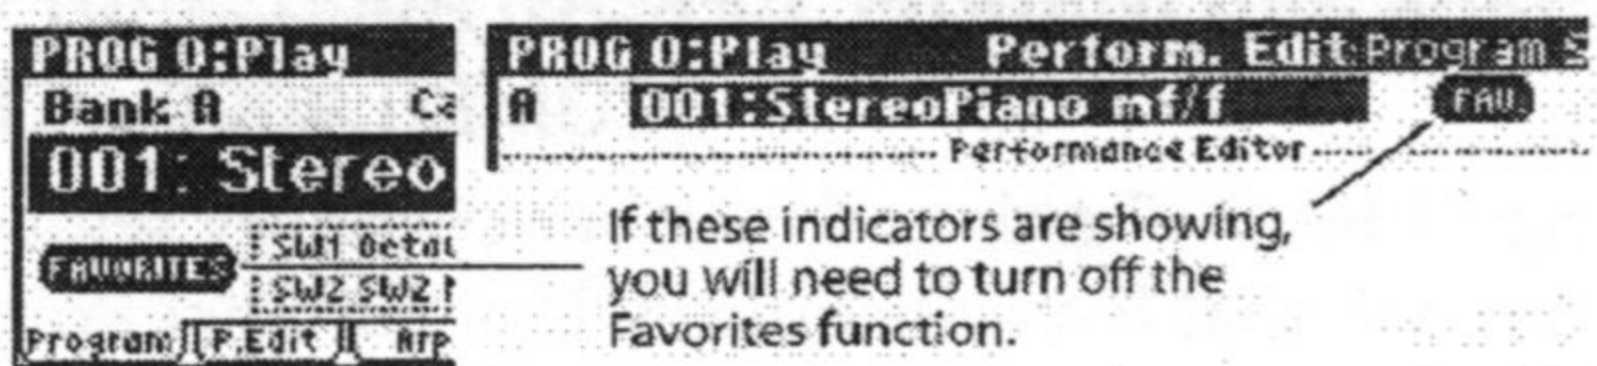

2. Make sure that "Program Select" is selected.



3. Hold down the [-] button and press the numeric button [1].

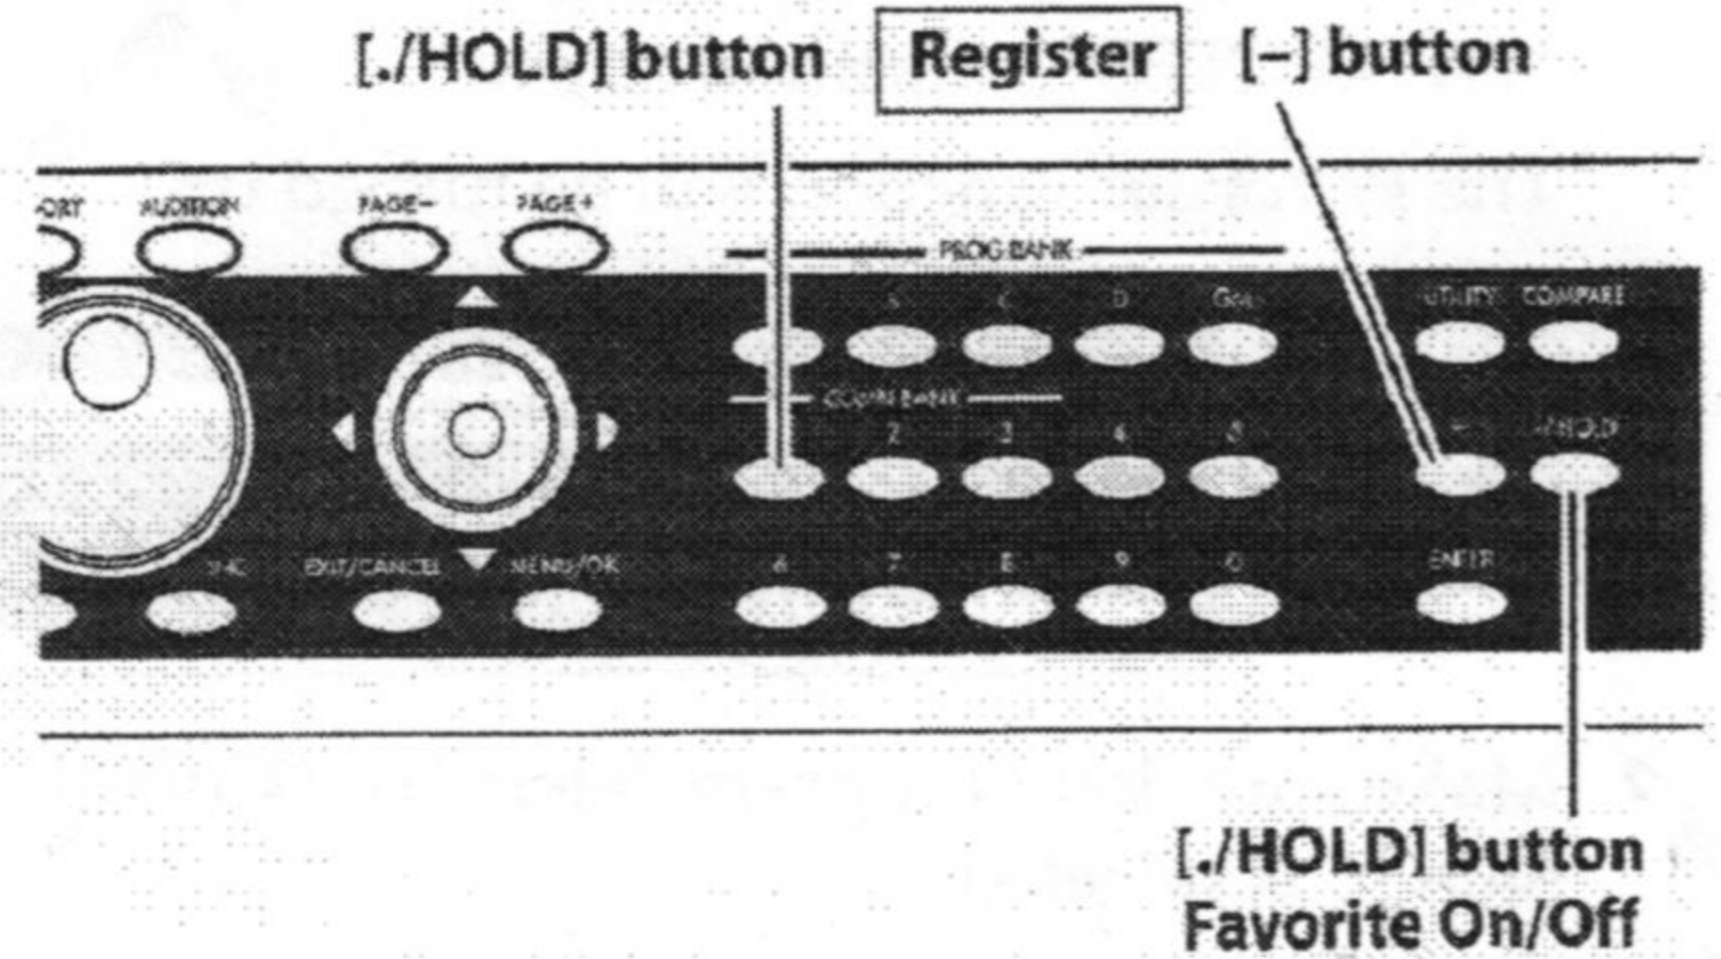

The selected program will be registered to the numeric button [1]. A message indicating that the registration has been completed will be shown as long as you hold down the numeric button.

registered the current to Favorite-[1]

4. Select the combination that you want to register to the numeric button [2].

For details on selecting a combination, refer to p.57 of the separate "Operation guide."

5. Make sure that "Combi Select" is selected.



6. Hold down the [-] button and press the numeric button [2].

The selected combination will be registered to the numeric button [2].

registered the current to Favorite-[2]

7. In the same way, you can register other programs or combinations to each of the numeric buttons [0]–[9].

*Note:* When you re-register a program or combination to a previously-registered numeric buttons, the previous setting will be overwritten.



## Recalling a Favorites Program or Combination

Here's how to recall a program or combination you've registered.

1. Press the [./HOLD] button to make the "FAVORITES" indication appear.

The Favorites function will be turned on.



2. Make sure that "Program Select" or "Combi Select" is selected.
3. You can press the numeric button [1] to select the registered program immediately.

Similarly, you can press the numeric button [2] to select the registered combination.

## Cautions

*Note:* The Favorites Setup settings are preserved even when the power is turned off. You don't need to write (save) them.

*Note:* If the Global "Power On Mode" is set to Memorize, the on/off state of the "FAVORITES" indication (i.e., the on/off status of the Favorites function) will be preserved the next time you turn on the power.

## GLOBAL 6: Favorites Setup

The GLOBAL 6: Favorites Setup page has been added to Global mode.

Here you can see the list of programs and combinations that have been registered as Favorites. From this same page, you can also edit this list and change which programs or combinations are registered as Favorites.

6-1: [1]-[5]

6-2: [6]-[0]

GLOBAL 6: Favorites Setup		[1]-[5]
[1]:	[PROG]	A001: StereoPiano mf/f
[2]:	[COMBI]	C096: "Piano & Strings"
[3]:	[COMBI]	C127: Init.Combination
[4]:	[COMBI]	C127: Init.Combination
[5]:	[COMBI]	C127: Init.Combination
[6]-[0]	[6]-[0]	

6-1a: [1]-[5]

6-2a: [6]-[0]

[1]-[5], [6]-[0]

These are the numeric button numbers used for the Favorites.

**Mode** **[PROG, COMBI]**

Specifies the mode (program or combination) currently registered to that Favorite button. Use the ClickPoint to highlight the mode and use the [VALUE] dial to change the mode.

**Bank and Number** **[(PROG) A000...g(d) 128, (COMBI) A000...C127]**

Specifies the bank and number currently registered to that Favorite button. Use the ClickPoint to highlight the bank or number and use the [VALUE] dial to change the setting. You can also use the BANK SELECT buttons to select the bank.